

## **CAREL PJ32S2H100**

Controls are factory programmed to provide the freezer temperature your operation requires. Allow several hours after initial startup to observe its operation. Setting may be adjusted if desired.

Note: The upper "dot" near the upper left corner indicates that the control is providing power for the compressor to run. The initial temperature shown at startup is room temperature in degrees Fahrenheit.

### **To Change the Temperature Setting:**

- Press the SET key and hold until the temperature setting displays and begins to flash (2-Sec) THEN RELEASE.
- Use the up & down arrows to select the new temperature desired.
- Press and release the SET key: The display will return to show the temperature of the freezer.

### **C. NELSON MFG. CO.**

265 N. Lake Winds Parkway, Oak Harbor, OH 43449  
**419-898-3305**

## **CAREL PJ32S2H100**

Controls are factory programmed to provide the freezer temperature your operation requires. Allow several hours after initial startup to observe its operation. Setting may be adjusted if desired.

Note: The upper "dot" near the upper left corner indicates that the control is providing power for the compressor to run. The initial temperature shown at startup is room temperature in degrees Fahrenheit.

### **To Change the Temperature Setting:**

- Press the SET key and hold until the temperature setting displays and begins to flash (2-Sec) THEN RELEASE.
- Use the up & down arrows to select the new temperature desired.
- Press and release the SET key: The display will return to show the temperature of the freezer.

### **C. NELSON MFG. CO.**

265 N. Lake Winds Parkway, Oak Harbor, OH 43449  
**419-898-3305**

## **CAREL PJ32S2H100**

Controls are factory programmed to provide the freezer temperature your operation requires. Allow several hours after initial startup to observe its operation. Setting may be adjusted if desired.

Note: The upper "dot" near the upper left corner indicates that the control is providing power for the compressor to run. The initial temperature shown at startup is room temperature in degrees Fahrenheit.

### **To Change the Temperature Setting:**

- Press the SET key and hold until the temperature setting displays and begins to flash (2-Sec) THEN RELEASE.
- Use the up & down arrows to select the new temperature desired.
- Press and release the SET key: The display will return to show the temperature of the freezer.

### **C. NELSON MFG. CO.**

265 N. Lake Winds Parkway, Oak Harbor, OH 43449  
**419-898-3305**

## **CAREL PJ32S2H100**

Controls are factory programmed to provide the freezer temperature your operation requires. Allow several hours after initial startup to observe its operation. Setting may be adjusted if desired.

Note: The upper "dot" near the upper left corner indicates that the control is providing power for the compressor to run. The initial temperature shown at startup is room temperature in degrees Fahrenheit.

### **To Change the Temperature Setting:**

- Press the SET key and hold until the temperature setting displays and begins to flash (2-Sec) THEN RELEASE.
- Use the up & down arrows to select the new temperature desired.
- Press and release the SET key: The display will return to show the temperature of the freezer.

### **C. NELSON MFG. CO.**

265 N. Lake Winds Parkway, Oak Harbor, OH 43449  
**419-898-3305**